

Optoma ET766XE Discrete IR Codes

Optoma Code: 32CD

Key	Description	Key code	Key Definition	
			OSD off	OSD On
1	Power on/off toggle	81	Power	-
2	UP OSD key	C1	-	Up
3	Source or LEFT OSD key	C3	Source	Left
4	ENTER OSD key	C5	-	Enter
5	Re-Sync or RIGHT OSD key	C4	Re-Sync	Right
6	DOWN OSD key	C2	-	Down
7	Keystone correction increment	85	Keystone +	-
8	Keystone correction decrement	84	Keystone -	-
9	Decrease speaker volume	8F	Volume -	-
10	Increase speaker volume	8C	Volume +	-
11	Brightness on/off or #1	87	Brightness	1
12	OSD menu on/off or #2	88	Menu	2
13	Zoom menu on/off or #3	89	ZOOM	3
14	HDMI source or #4	86	HDMI	4
15	Freeze video or #5	8B	Freeze	5
16	Audio/Video Mute or #6	8A	AV mute	6
17	S-Video source or #7	83	S-Video	7
18	VGA source or #8	8E	VGA	8
19	Composite Video source or #9	8D	Video	9